



**Auxiliary Contacts AX AL**

Description	Cat ref.
Auxiliary contact 1NO+1NC 250V AC (x160-P160-x250-P250-x630-P630)	<b>HXA021H</b>
Alarm contact 1NO+1NC 250V AC (x160-P160-x250-P250-x630-P630)	<b>HXA024H</b>
Auxiliary low level 1NO+1NC 125V AC (x160-P160-x250-P250-x630-P630)	<b>HXA025H</b>
Alarm contact low level 1NO+1NC 125V AC (x160-P160-x250-P250-x630-P630)	<b>HXA026H</b>

HXA021H



**Shunt Trips SH**

Description	Cat ref.
Shunt trip 24V DC (x160-P160-x250-P250-x630-P630)	<b>HXA001H</b>
Shunt trip 48V DC (x160-P160-x250-P250-x630-P630)	<b>HXA002H</b>
Shunt trip 100-120V AC (x160-P160-x250-P250-x630-P630)	<b>HXA003H</b>
Shunt trip 200-240V AC (x160-P160-x250-P250-x630-P630)	<b>HXA004H</b>
Shunt trip 380-450V AC (x160-P160-x250-P250-x630-P630)	<b>HXA005H</b>

HXA001H



**Undervoltage Releases UV**

Description	Cat ref.
Undervoltage release 24V DC (x160-P160-x250-P250-x630-P630)	<b>HXA011H</b>
Undervoltage release 100-120V AC (x160-P160-x250-P250-x630-P630)	<b>HXA013H</b>
Undervoltage release 200-240V AC (x160-P160-x250-P250-x630-P630)	<b>HXA014H</b>
Undervoltage release 380-450V AC (x160-P160-x250-P250-x630-P630)	<b>HXA015H</b>

HXA011H



**Delayed Undervoltage Releases DUVR**

Description	Cat ref.
UVR delayed 24V DC (x160-P160-x250-P250-x630-P630)	<b>HXA051H</b>
UVR delayed 110-120V AC (x160-P160-x250-P250-x630-P630)	<b>HXA053H</b>
UVR delayed 220-240V AC (x160-P160-x250-P250-x630-P630)	<b>HXA054H</b>
UVR delayed 380-450V AC (x160-P160-x250-P250-x630-P630)	<b>HXA055H</b>

HXA051H



**Rotary Handles**

Description	Cat ref.
Direct rotary handle x160	<b>HXA030H</b>
Extended rotary handle x160	<b>HXA031H</b>

HXA030H



## Padlock

Description  
Padlock (x160-P160-x250-P250-x630)

Cat ref.  
**HXA039H**

HXA039H



## Collar Terminals, Connections & Barriers

Description  
Collar terminal x160 AI 3P  
Extended connection x160 4P collar  
Spreader x160 3P collar  
Interphase barrier x160 3/4P  
Interphase barrier (x250-h250) 3/4P  
Collar terminal x160 AI 4P  
Spreader x160 4P collar

Cat ref.  
**HYA005H**  
**HYA013H**  
**HYA014H**  
**HYA019H**  
**HYB019H**  
**HYA006H**  
**HYA015H**

HYA005H



## Terminal Covers

Description  
Terminal cover x160 3P long  
Terminal cover x160 3P spreader  
Terminal cover for collar terminal x160 3P  
Terminal cover x160 4P long  
Terminal cover x160 4P spreader  
Terminal cover for collar terminal x160 4P  
Terminal cover x160 3P short  
Terminal cover x160 4P short

Cat ref.  
**HYA021H**  
**HYA023H**  
**HYA027H**  
**HYA022H**  
**HYA024H**  
**HYA028H**  
**HYA025H**  
**HYA026H**

HYA021H



## Din Rail Adaptor

Description  
DIN Rail adaptor x160 3P/4P

Cat ref.  
**HYA033H**

HYA033H



## Connecting Kit

Description  
Connecting kit 3P/4P

Cat ref.  
**HYA035H**

HYA035H



## Din Rail Raiser

Description  
Rail DIN raiser (x160-x250)

Cat ref.  
**HYA036H**

HYA036H



## Ring Lugs

Description	Cat ref.
Ring Lug D:8,5 3P/4P for cable 16mm <sup>2</sup>	<b>HYA086H</b>
Ring Lug D:8,5 3P/4P for cable 25mm <sup>2</sup>	<b>HYA087H</b>
Ring Lug D:8,5 3P/4P for cable 35mm <sup>2</sup> (x160-P160-x250-P250)	<b>HYA088H</b>
Ring Lug D:8,5 3P/4P for cable 50mm <sup>2</sup> (x160-P160-x250-P250)	<b>HYA089H</b>
Ring Lug D:8,5 3P/4P for cable 70mm <sup>2</sup> (x160-P160-x250-P250)	<b>HYA090H</b>
Ring Lug D:8,5 3P/4P for cable 95mm <sup>2</sup> (x160-P160-x250-P250)	<b>HYA091H</b>

Cat ref.  
**HYA086H**  
**HYA087H**  
**HYA088H**  
**HYA089H**  
**HYA090H**  
**HYA091H**

HYA086H