

# Klik7

## Removal of Release Button



Insert small flat blade screwdriver into gap between button and cover



Prise the button up to release the button clip.



Remove & discard button.  
Pull down on plug to ensure it is still locked in place.



Apply label on to cover of plug.