

Meter Kit Instructions

Instruction leaflet for fitting 125A Meter Pack

Meter to be fitted when fitting incomer (see incomer instructions). Incomer shown in place for illustration purposes.

Gently prise the DIN-rail from the support moldings.

Clip the pre-wired meter to the DIN-rail (A). Ensure the cables go behind the rail. Please refer to the incomer fitting instructions for fitting of incomer links.

Clip the DIN-rail back into position. Connect the neutral link first with the M5 bolt, and then the phase links to the busbar stack, along with the loom leads (L1, L2, L3 & N)

Ensure the meter cables have sufficient clearance from the phase links.

JK140PM

JK240PM



Ensure that all electrical connections on the incomer device are tightened to 3.5Nm. Ensure the copper link upper connection points are tightened to 5Nm.

Fit the fuse rail (B) and the CT block (C) to the pre-drilled holes.


Ensure label on front of CT reads [L1 L2 L3] when fitted.

Connect the CT earth flying lead to the earth bolt assembly of the enclosure (D).


Before fitting the shroud supplied with the meter pack kit, the device cut-out aperture needs cutting with a knife. Remove (E).

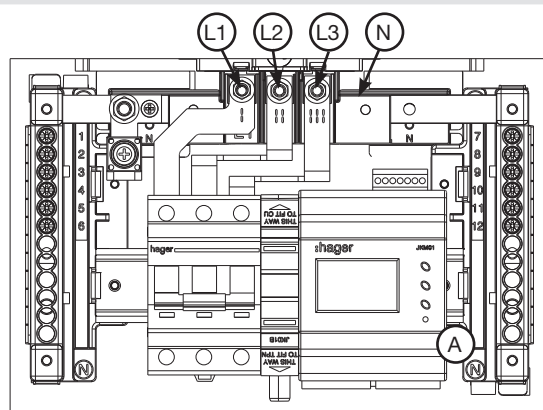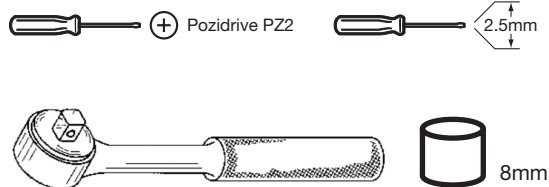

Connection with 3 pole switch incomer

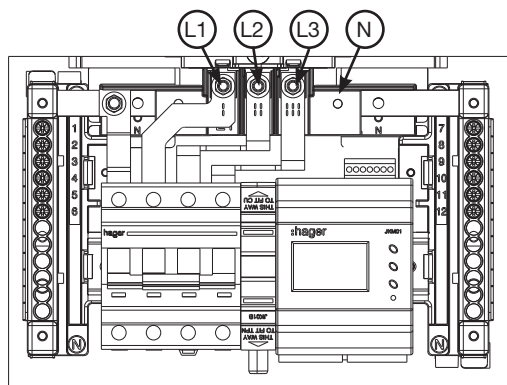

Connection with 4 pole switch, RCCB or direct connection incomer

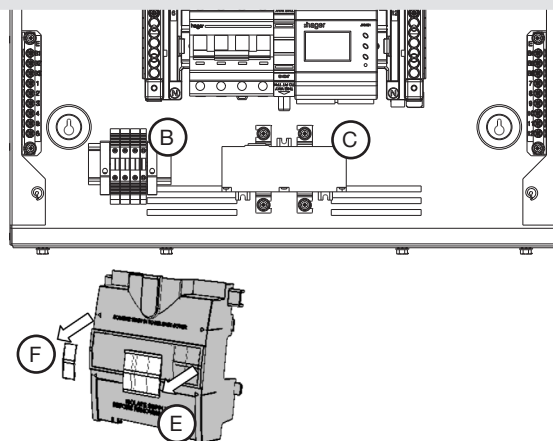

Hager Technical Service Centre: 01952 675 689
Hager Technical Fax: 01952 675 557

Hager Sales Service Centre: 01952 675612

Website: www.hager.co.uk
E-mail us: info@hager.co.uk
Twitter: @hageruk